

## HOW TO CALCULATE LINE PARTS

 
1 part of line



2 parts of line




3 parts of line



4 parts of line



5 parts of line

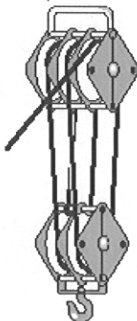

Number of Parts of Line	Ratio for Bronze Bushed Sheaves	Ratio for Anti-Friction Bearing Sheaves
1	.96	.98
2	1.87	1.94
3	2.75	2.88
4	3.59	3.81
5	4.39	4.71
6	5.16	5.60
7	5.90	6.47
8	6.60	7.32
9	7.27	8.16
10	7.91	8.98
11	8.52	9.79
12	9.11	10.6
13	9.68	11.4
14	10.2	12.1
15	10.7	12.9
16	11.2	13.6
17	11.7	14.3
18	12.2	15.0
19	12.6	15.7
20	13.0	16.4
21	13.4	17.0
22	13.8	17.7
23	14.2	18.3
24	14.5	18.9

$$\frac{\text{TOTAL LOAD TO BE PULLED}}{\text{SINGLE LINE PULL IN POUNDS}} = \text{RATIO}$$